

LOCKING NUT HEIGHT ADJUSTMENT



Step 1- Tighten the string tree screws just enough to ensure the strings make firm contact with the back edge of the Locking Nut



Step 2- Loosen the top mount screws Using the provided Torx driver, slightly loosen the top mount titanium Torx screws. Loosen only enough to allow height adjustment. Re-tighten them again after the height adjustment is complete



Step 3- Adjust the height Adjust the locking nut height using the side height adjustment screws on each side. Use provided 2.0 allen key. Turn clockwise to raise the action and counterclockwise to lower it.